

MODERN SHIPLAP

INSTALLATION INSTRUCTIONS

PLAN

TO INSTALLATION



CUT

USING STANDARD WOODWORKING TOOLS



FASTEN

USE SUPPLIED STARBORN PRO PLUG® SCREWS, OR EXTERIOR #6 - #8 SCREWS











DO NOT INSTALL

IMPROPERLY COLORED BOARDS
& DOUBLE CHECK TO
YOUR APPROVED SAMPLES
BEFORE INSTALLING



JOIN WITH FASTENERS


PREPARATION

Apply NuCedar products over a properly installed weather resistant barrier (ex. House Wrap) and ensure all wall openings and penetrations are properly flashed in accordance with local building codes and window/door manufacturer's flashing recommendations. The NuCedar cladding system is not a water-tight barrier. It is designed to reduce the amount of water that reaches the underlying weather resistant barrier. All forms of NuCedar Vertical Siding must be installed over a continuous, flat surface capable of supporting the use of screws that will restrict temperature related expansion and contraction of the siding (Ex. OSB or Plywood) at least ½" thick. NuCedar Vertical Siding cannot be installed over open framing or furring strips.

FASTENER PLACEMENT 12" HOUSE WRAP INSTALL SIDING OVER SOLID SHEATHING SUCH AS PLYWOOD OR OSB FASTENER PLACEMENT 12" HOUSE WRAP

FASTENING

- Starborn PRO PLUG® 1-3/8" screws are included with all Vertical Orders. Other approved Fasteners are #6 - #8 screws.
- You may use longer screws than the 1-3/8", however be cautious of materials behind your substrate, e.g. Pipes or Wires. We highly recommend using the approved fasteners listed, other fasteners have not been tested and may jeopardize the performance of your siding and any claims may be denied.
 SCARF JOINT
- Do not overdrive screws
- Follow the fastening pattern outlined below
- Installing Joints:
 - A Scarf Joint is best for joints (see picture)
 - If installing a Butt Joint, you can Z-Flash with color matched coil stock.
 - Adhesive is not necessary at joints, but if desired, contact us for recommendations.
- On 8" & 10" Width Boards, regardless of the board length, make sure to add an extra screw on the ends, and the center of the board, as shown below

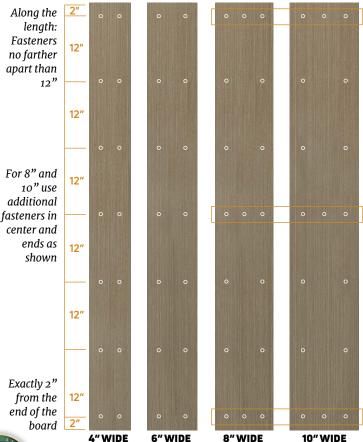

NORTHEAST REGION: PHONE: (800)526-4708



SOUTHEAST REGION: PHONE: (800)296-0288



MODERN SHIPLAP

INSTALLATION


CORNER INSTALLATION OPTIONS


J Corner: Siding slides under corner


HORIZONTAL APPLICATION

VERTICAL APPLICATION




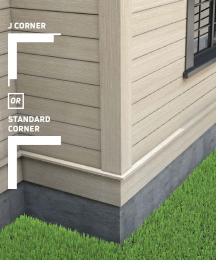


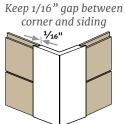



Standard Corner: Siding butts to edges Keep 1/16" gap between No gap needed for corner and siding vertical application








Stacked Corner:







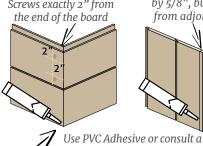

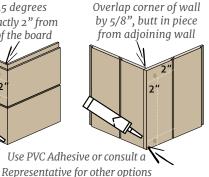



TOUCH-UP AND RE-PAINTING

ALL TOUCH UP PAINT MUST BE SHAKEN VIGOROUSLY TO ENSURE COLOR MATCHES.

Always test paint in a small area or scrap piece to ensure desired color. Apply touch-up paint to all cut, planed edges and small damaged areas. To ensure color matches and that heat reflective properties are in the paint, we recommend purchasing paint with us, through your local dealer. However, if needed in a timely manner, use a high-grade exterior latex paint. PPG Permanizer® or PPG Acri-Shield Max® Exterior 100% Acrylic Latex Satin low sheen Paint. Take a sample with you for color matching purposes.

Re-painting NuCedar will void your warranty. If you would like to re-paint, use a highgrade exterior latex paint such as PPG Permanizer® or PPG Acri-Shield Max®. It is recommended that your paint color has a Light Reflective Value (LRV) of 55 units or greater.

Prior to touching up or repainting, make sure that the surface area is properly cleaned and prepared according to manufacturer's specifications.

CARE AND MAINTENANCE

NuCedar products can be safely cleaned using a mixture of water and mild detergent or a mild household cleaner. Remove mold/mildew using a mild commercial mold/mildew remover. Examples are a 10:1 bleach mixture or products such as Wet&Forget® or Simple Green®. Be sure to test a small area before applying everywhere. NuCedar can be lightly sprayed or cleaned with a house brush (high pressure power washers could destroy the Rough Sawn texture, please consult a rep before deciding to do this) to remove dust and debris. Refer to manufacturer's instructions.

YOU MUST FOLLOW THE INSTALLATION INSTRUCTIONS IN THIS MANUAL TO MAINTAIN PRODUCT WARRANTY

In order to secure your warranty, please visit our website to register your product: jainbuildingproducts.com/warranty-registry For additional copies and revisions, go to gardenstatelumber.com/NuCedar.

NORTHEAST REGION: PHONE: (800)526-4708

SOUTHEAST REGION: PHONE: (800)296-0288