

# NuCedar Mills TONGUE & GROOVE INSTALLATION INSTRUCTION

finely crafted exteriors

PLAN LAYOUT PRIOR **TO INSTALLATION** 

CUT **USING STANDARD WOODWORKING TOOLS** 



н.







MATERIAL

FASTENING

Fasteners are #6 - #8 screws.

Do not overdrive screws

Installing Joints:

#### DO NOT INSTALI **IMPROPERLY COLORED BOARDS** & DOUBLE CHECK TO VOUD APPROVED SAMPLES **BEFORE INSTALLING**

FAST

**USE SUPPLIED STARBORN PRO PLUG®** SCREWS, OR EXTERIOR #6 - #8 SCREWS

Starborn PRO PLUG® 1-3/8" screws are included with all Vertical Orders. Other approved

your substrate, e.g. Pipes or Wires. We highly recommend using the approved fasteners


CUT 45°

You may use longer screws than the 1-3/8", however be cautious of materials behind



## PREPARATION

Apply NuCedar products over a properly installed weather resistant barrier (ex. House Wrap) and ensure all wall openings and penetrations are properly flashed in accordance with local building codes and window/door manufacturer's flashing recommendations. The NuCedar cladding system is not a water-tight barrier. It is designed to reduce the amount of water that reaches the underlying weather resistant barrier. All forms of NuCedar Vertical Siding must be installed over a continuous, flat surface capable of supporting the use of screws that will restrict temperature related expansion and contraction of the siding (Ex. OSB or Plywood) at least 1/2" thick. NuCedar Vertical Siding cannot be installed over open framing or furring strips.

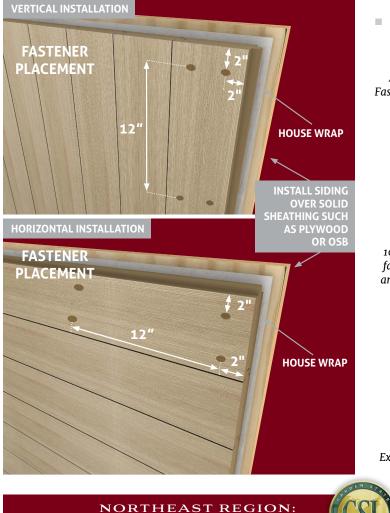


PHONE: (800)526-4708

#### A Scarf Joint is best for joints (see picture)

your siding and any claims may be denied.

Follow the fastening pattern outlined below

- If installing a Butt Joint, you can Z-Flash with color matched coil stock.
- Adhesive is not necessary at joints, but if desired, contact us for recommendations.
- On 6-3/4" Width Board, regardless of the board length, make sure to add an extra screw on the ends, and the center of the board, as shown below.

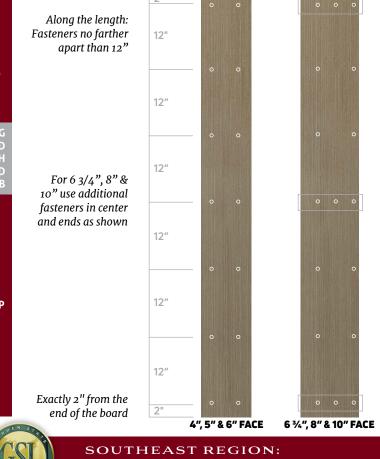

PHONE: (800)296-0288



JOIN WITH FASTENERS


## VOL.3



# NuCedar Mills TONGUE & GROOVE INSTALLATION INSTRUCTIONS


# **CORNER INSTALLATION OPTIONS**

## HORIZONTAL APPLICATION

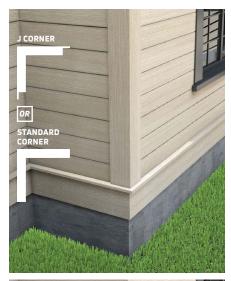



**J Corner:** Siding slides under corner Keep 1/16" gap between corner and siding 1/16"



corner and siding

1/16"


**Mitered Corner:** 

Cut at 45 degrees


Screws exactly 2" from the end of the board

2


No gap needed for vertical application



Standard Corner: Siding butts to edges Keep 1/16" gap between No gap needed for vertical application



**Stacked Corner:** Overlap corner of wall by 5/8", butt in piece from adjoining wall

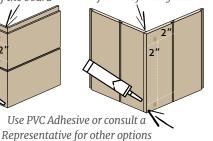



VERTICAL APPLICATION



## CARE AND MAINTENANCE

NuCedar products can be safely cleaned using a mixture of water and mild detergent or a mild household cleaner. Remove mold/mildew using a mild commercial mold/mildew remover. Examples are a 10:1 bleach mixture or products such as Wet&Forget® or Simple Green®. Be sure to test a small area before applying everywhere. NuCedar can be lightly sprayed or cleaned with a house brush (high pressure power washers could destroy the Rough Sawn texture, please consult a rep before deciding to do this) to remove dust and debris. Refer to manufacturer's instructions.

### YOU MUST FOLLOW THE INSTALLATION INSTRUCTIONS IN THIS MANUAL TO MAINTAIN PRODUCT WARRANTY

In order to secure your warranty, please visit our website to register your product: jainbuildingproducts.com/warranty-registry For additional copies and revisions, go to gardenstatelumber.com/NuCedar.

NORTHEAST REGION: PHONE: (800)526-4708

TOUCH-UP AND RE-PAINTING

ALL TOUCH UP PAINT MUST BE SHAKEN VIGOROUSLY TO ENSURE COLOR MATCHES.

sheen Paint. Take a sample with you for color matching purposes.

prepared according to manufacturer's specifications.

Always test paint in a small area or scrap piece to ensure desired color. Apply touch-up paint to all cut, planed edges and small damaged areas. To ensure color matches and

that heat reflective properties are in the paint, we recommend purchasing paint with us,

Re-painting NuCedar will void your warranty. If you would like to re-paint, use a high-

Prior to touching up or repainting, make sure that the surface area is properly cleaned and

grade exterior latex paint such as PPG Permanizer® or PPG Acri-Shield Max®. It is recommended that your paint color has a Light Reflective Value (LRV) of 55 units or greater.

through your local dealer. However, if needed in a timely manner, use a high-grade exterior

latex paint. PPG Permanizer® or PPG Acri-Shield Max® Exterior 100% Acrylic Latex Satin low



SOUTHEAST REGION: PHONE: (800)296-0288

2